

STAGE

BALCONY

BALCONY

BALCONY

CATWALK 1


CATWALK 2

CATWALK 3

PERSEPHONE THEATRE
ELECTRICAL RAILS SETUP
BLUE = LIGHTING PIPES

- A** = VERTICAL PIPE INSIDE NICHE AT STAGE LEVEL*
- B** = VERTICAL PIPE INSIDE NICHE AT BALCONY LEVEL*

SCALE: 1/2"

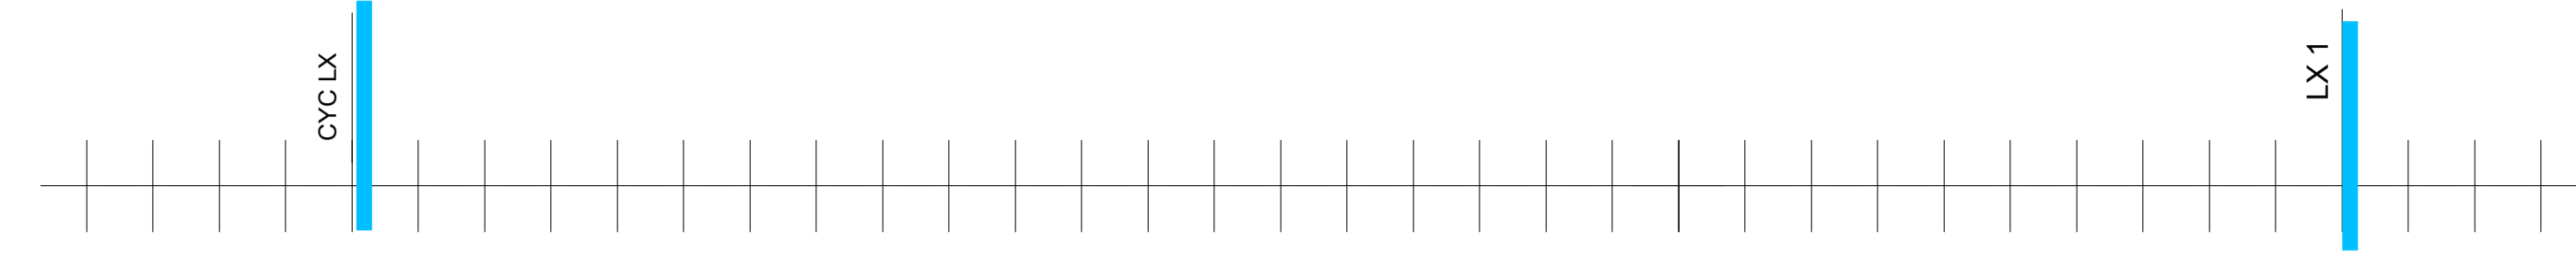

CURTAINS

FIRE CURTAIN

C

A B

D

A B

C

D

Orchestra Pit Covers

Traps Covers

CL

CL

LX1

LX2

LX3

LX4

LX5

LX6

LX6

LX7

LX7

LX8

LX8

LX9

LX9

LX10

LX10

LX11

LX11

LX12

LX12

LX13

LX13

LX14

LX14

LX15

LX15

LX16

LX16

LX17

LX17

LX18

LX18

LX19

LX19

LX20

LX20

LX21

LX21

LX22

LX22

LX23

LX23

LX24

LX24

LX25

LX25

LX26

LX26

LX27

LX27

LX28

LX28

LX29

LX29

LX30

LX30

LX31

LX31

LX32

LX32

LX33

LX33

LX34

LX34

LX35

LX35

LX36

LX36

LX37

LX37

LX38

LX38

LX39

LX39