
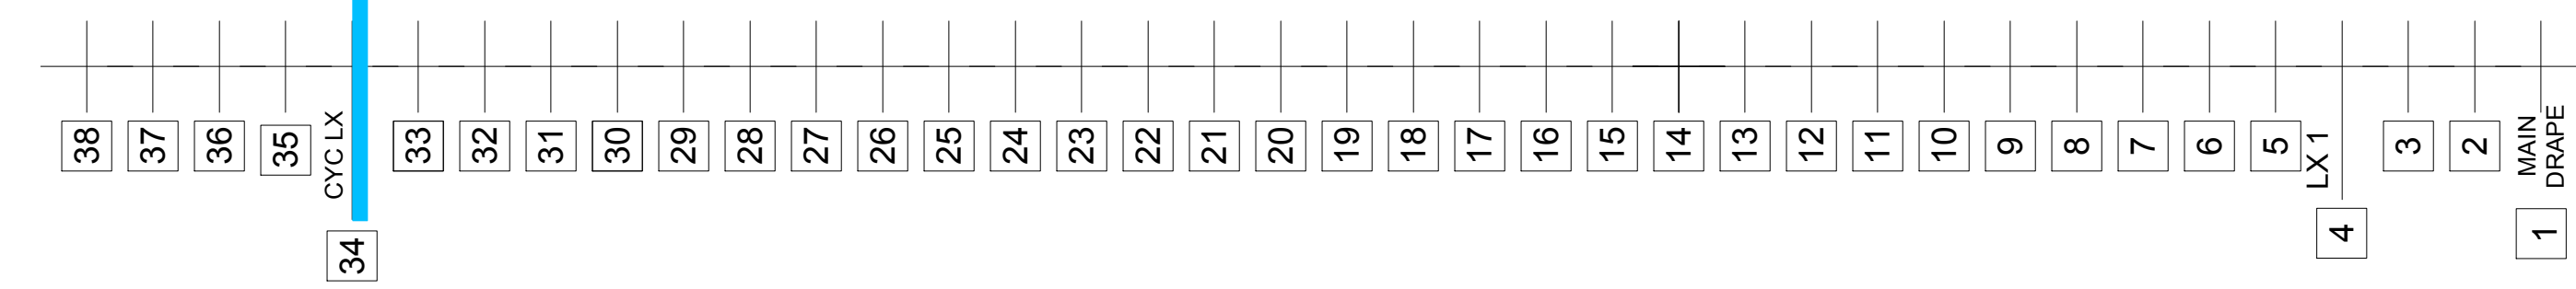


STAGE DIMENSIONS
 1. PROSCENIUM WIDTH: 37"
 STAGE DEPTH:
 FIRE CURTAIN TO CYC: 28' 9"
 FIRE CURTAIN TO APRON LIP: 8'9"
 CYC TO UPSTAGE WALL: 6'

PERSEPHONE THEATRE
 ELECTRICAL RAILS SETUP
BLUE = LIGHTING PIPES

A = VERTICAL PIPE INSIDE NICHE AT STAGE LEVEL*
B = VERTICAL PIPE INSIDE NICHE AT BALCONY LEVEL*

SCALE: 1/2"

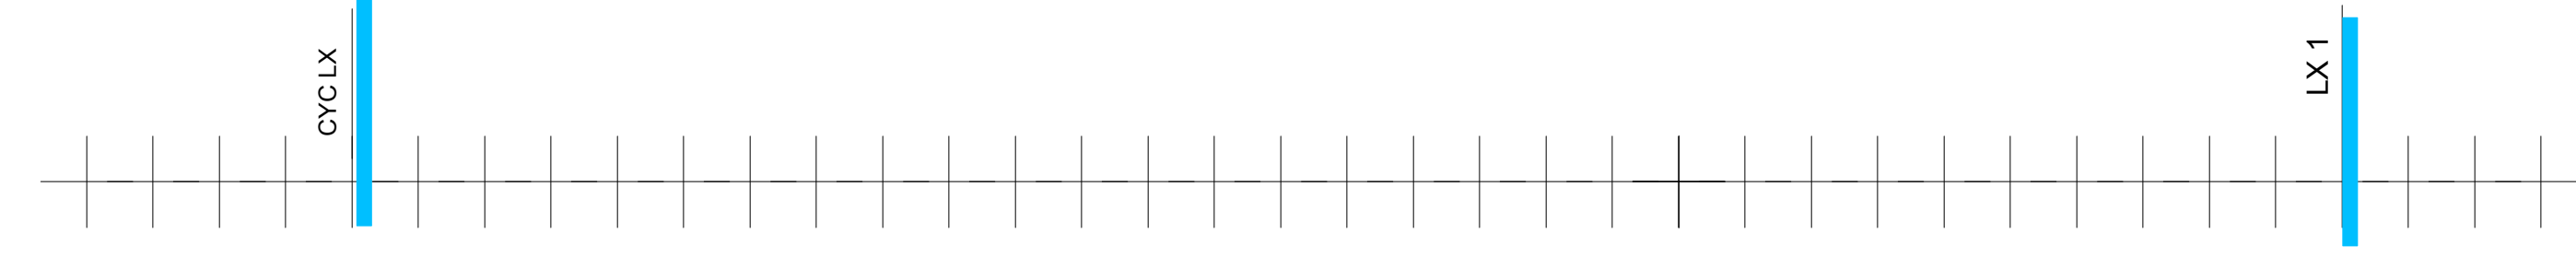

STAGE

BALCONY

BALCONY

BALCONY

CATWALK 1

CATWALK 2

CATWALK 3

CURTAINS

FIRE CURTAIN

Orchestra Pit Covers

Traps Covers

CL

CL

A B

A B

C

C

D

D